



RAM BLINDS

Owner's Manual

RAM BLIND COVER

RAM 650 BLIND COVER – SKU RB7037

RAM 700 BLIND COVER – SKU RB7038

IMPORTANT NOTE:


- **RAM Covers are designed to only fit specific RAM blinds. The covers should be removed and stored in a rodent proof container when not in use. Cover will fade over time in direct sunlight.**



- Images are for reference only
- Blinds are not included and sold separately

**READ, UNDERSTAND,
FOLLOW ALL WARNINGS
AND INSTRUCTIONS BEFORE
ASSEMBLING, INSTALLING
OR USING THIS PRODUCT!**

Review additional instructions
online at RAMBLINDS.com

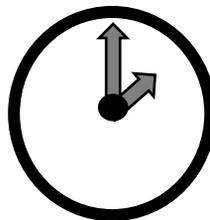

**Approximate
Assembly Time
15 Minutes**

THIS OWNER'S MANUAL MUST ALWAYS ACCOMPANY THIS PRODUCT AND BE TRANSFERRED WITH IT UPON CHANGE OF OWNERSHIP, WHEN LOANED, OR PRESENTED TO ANOTHER PERSON.

QUESTIONS? Email support@Nexcam.com for assistance.



INTRODUCTION

Thank you for purchasing our RAM BLIND Cover. This product is designed by hunters, for hunters. It is engineered for safety, security, comfort, and stealth, putting the odds in your favor when the moment of truth arrives. Constructed with only the highest quality materials it's built for years of satisfying hunts.

Read this instruction manual and all warnings in its entirety before assembling, installing or using this product.

If you have any questions on assembly, use, safety warnings, or anything else, please contact us by email at support@Nexcam.com.

CONTENTS

Introduction	2
Warnings	3
No Alterations and Parts List	4
Installation Instructions	5-6
Use	7
Storage and Removal	7
Limited Warranty	8

Note: Before beginning installation of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

WARNINGS

ATTENTION!

 **WHEN YOU SEE A  SYMBOL OR THE WORD "WARNING!" BE SURE TO READ THE MESSAGE! THE INFORMATION CONTAINED IN THESE MESSAGES CAN SAVE YOUR LIFE OR PREVENT SERIOUS INJURY!! BE SAFE! FOLLOW ALL WARNINGS!! FAILURE TO FOLLOW ALL WARNINGS MAY RESULT IN SERIOUS INJURY OR DEATH!**

WARNING

-  **For your safety**, read and understand this user's manual in its entirety before attempting to assemble, setup, install and/or otherwise use this product. Contact NEXCAM by email at support@Nexcam.com for any questions. Minimally review contents of this user's manual annually.
-  **You must read, understand, and follow all Blind Manufacturers warnings and instructions before using this product!**
-  **Installation and Removal** of blind cover **MUST** be conducted at ground level with the blind at ground level. Failure to follow this instruction may result in serious injury or death!
-  **Use heat source at your own risk – FIRE AND CARBON MONOXIDE HAZARD IN ENCLOSED AREA –** Follow heat source instructions, warnings and use proper ventilation requirements. Failure to follow this instruction may result in serious injury or death!
-  **Always** keep all flame and heat sources away from fabric cover. The fabric may burn if in contact with any flame or heat source.
-  **Always** be sure there is adequate fresh air flow in blind.
-  **If you have problems with your cover or questions**, contact NEXCAM, RAM BLINDS by email at support@Nexcam.com.
-  **Safe use of this product** is sole responsibility of the user to provide any person(s) who borrows, uses or purchases this product with the owner's manual and all warning prior to use. Do not allow a person to use this product(s) that has not reviewed all instructions and warnings. Failure to follow these instructions may result in serious injury or death! Store user's manual and warnings in a safe location where they can be shared with potential users and must be reviewed annually. If user's manual or warnings are lost, email support@Nexcam.com for assistance.

WARNING

-  **Always** follow safe weapon/firearm handling practices.
-  **Operating a firearm** from inside the blind, be sure the barrel is outside the window, cover and curtain for your safety and protection.
-  **Never** shoot firearm or archery equipment through curtain or cover.
-  **Prior to each hunt**, make certain you have a signaling device (e.g., mobile phone, cell phone, radio, whistle, signal flare, Personal Locator Device [PLD], etc.) in your possession and on your person in an operable condition. This device must be within easy access should you experience the need to contact emergency assistance.
-  **Always** inform someone of hunting location, where blind is located, and expected duration of hunt. Have second adult present or at least accessible by cell phone or other means when using this product. Ability to get help quickly may save your life in an emergency.
-  **DO NOT** modify, fix/repair, alter, bend, cut, or heat this product in any way.
-  **For adult use only.** No one under the age of 18 should attempt to use this or any other NEXCAM product without direct adult supervision.
-  **Never** use this product while taking drugs (even prescription drugs) or alcohol.
-  **Never** use this product when feeling sleepy, ill, nauseous, dizzy or if you have prior medical condition that could cause a problem i.e., heart condition, joints that lock-up, spinal fusions, etc. or if you are not well rested or if you are not athletically fit. **Never** sleep in blind.
-  **Never** use this product during inclement weather such as rain, lightning, windstorms, snowstorms or icy conditions and end your hunt and return if inclement conditions arise.



NO ALTERATIONS OR MODIFICATIONS:

This product is designed to function properly in its original condition. Alterations or modifications can make it unsafe and constitute a misuse of the product. Do not alter, add, modify or substitute parts or accessories not made by NEXCAM. If a part(s) is missing and/or damaged, immediately email support@Nexcam.com for assistance.

PARTS LIST AND NOMENCLATURE:

Unpack and Check

Review & Confirm all items are included in Package Contents. If they are not, stop and e-mail support at support@Nexcam.com before continuing or using this product.

PARTS LIST AND NOMENCLATURE FOR RAM 650 and RAM 700:

1	Blind Cover with Curtains	Qty 1
2	Plastic nuts and bolts	Qty 4
3	Elastic Bungee	Qty 2
4	Ground Stakes	Qty 6

TOOLS REQUIRED FOR OPTIONAL BOLT INSTALL:

1	Drill with 7/16 inch drill bit
---	--------------------------------

INSTALLATION INSTRUCTIONS:

Step 1:

Prepare blind for cover installation by opening door and all windows on blind.

NOTE: Blind door can be open or closed for cover installation. Cover should be adjusted and tested to fit door prior to completing steps 8 and 9.

Cover is designed to fit blind seam.

Figure 1
Prepare Blind



Step 2:

Open blind cover, unfold cover so camo fabric is on outside. Unclip the 6 side clips. Unzip both sides of the cover by fully unzipping zipper up to roof line.

Figure 2
Open Cover



Step 3:

Position cover so door side of cover lines up with door. With 1 person standing in front of the door, throw 1/2 of blind cover overtop of blind while the second person reaches through the windows or walks around the blind pulling the sides of the cover down around the blind.

Figure 3
Place Cover on
Blind



Step 4:

From inside blind and with the blind windows still open, unzip the window opening in the cover to the desired height. Repeat for remaining windows.

NOTE: Window flap is designed to be tucked in-between the cover and blind as the window is zipped open.

NOTE: Adjust cover as needed to best fit door.



Figure 4 Cover Window Zipper

INSTALLATION INSTRUCTIONS:

Step 5:

The curtains are located inside a pocket on the cover, in between cover and blind above the window opening. Open the pocket and adjust the curtains vertically on the tracks to desired height.

Repeat Steps for remaining windows.

NOTE: The curtains are not designed to be shot through.



Figure 5 Adjusting Mesh Curtains

Step 6:

Attach Door onto blind door by removing Velcro handle flap on cover. Place the flap through the blind door handle, and secure with Velcro on the opposite side of handle.

Figure 6
Attaching Door
to Door Handle



Step 7:

Zip side zippers of cover from roof down to bottom of blind. Clip the 6 plastic buckles and tighten the cover to the blind as needed.

NOTE: If blind is elevated, this can be accomplished by reaching through the side windows nearest the zippers.



Figure 7 Zip Sides and Secure Straps

Step 8:

Using the 5/16 drill bit, drill 4 holes to secure the cover to the blind.

Locate and drill the 2 drill marks on the blind, just right of the door opening. Both marks are approximately 2 inches right of the door shelf bracket. One is approximately 10 inches above the door shelf bracket. Other is approximately 16 inches below the door shelf bracket.

NOTE: Some blinds will not have the depicted dimple marks on the blind.



Figure 8 Secure Cover

INSTALLATION INSTRUCTIONS:

Step 8 Continued:

Using 2 of the gray nylon bolts and the grommets on the cover, bolt the cover to the blind.

Next, drill a hole in the top right corner and another hole in the bottom right corner of the door approximately 1 inch from the corner.

NOTE: the drill locations on the door are not depicted by dimple marks on the blind.



Step 8 Continued:

Using the 2 remaining bolts and the grommets on the cover, bolt the cover to the door panel on the top and bottom corners of the door.



Step 9 A. Blind on Ground:

If your blind is being used on the ground, secure cover by inserting ground stakes through grommets on bottom of cover and anchoring to ground.



Step 9 B. Blind on Platform:

If your blind is elevated on a RAM Platform, use the included bungee ropes to securely lace the cover in a star pattern underneath the platform securing the cover to the platform.



USE:

⚠ WARNING

YOU MUST READ, UNDERSTAND, AND FOLLOW ALL BLIND MANUFACTURERS WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT!

Use heat source at your own risk – FIRE AND CARBON MONOXIDE HAZARD IN ENCLOSED AREA – Follow heat source instructions, warnings and use proper ventilation requirements.

Always keep all flame and heat sources away from fabric cover. The fabric may burn if in contact with any flame or heat source.

Always be sure there is adequate fresh air flow in blind.

If you have problems with your cover or questions, contact NEXCAM by email at support@Nexcam.com.

Always follow safe weapon/firearm handling practices.

Operating a firearm from inside the blind, be sure the barrel is outside the window, cover and curtain for your safety and protection.

Never shoot firearm or archery equipment through curtain or cover.

Always inform someone of hunting location, where elevated platform is located, and expected duration of hunt.

Always have second adult present or at least accessible by cell phone or other means when using this product. Ability to get help quickly may save your life in event of an emergency.

Always take and use signal device (mobile phone, radio, whistle, signal flare or personal locating device – PLD) when using this product. Always keep signal device on you and readily available at all times.

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR DEATH!

Enter blind with NEXCAM Cover installed by opening door. To open and adjust mesh curtain position, open blind window and slide curtain to desired position.

STORAGE:

Even though these cover are designed for years of outdoor use, it is recommended to remove cover after hunting season is complete or if cover will not be used for several months. Store indoors in a clean dry location out of direct sunlight. This will increase the life of the product and protect it from damage due to extreme weather conditions, animals, insects, etc.

To Remove Cover – Reverse installation instructions.

LIMITED WARRANTY*:

LIMITED ONE YEAR WARRANTY. WE WARRANT THIS PRODUCT AGAINST ANY MANUFACTURER DEFECTS IN MATERIALS AND WORKMANSHIP FOR PERIOD OF ONE YEAR FROM DATE OF PURCHASE FROM AUTHORIZED RETAILER TO THE **ORIGINAL OWNER**. WE WILL REPAIR OR REPLACE ANY PART FOUND DEFECTIVE IF THE UNIT CLAIMED TO BE DEFECTIVE IS RETURNED TO US POSTAGE PREPAID, WITHIN WARRANTY PERIOD. CONTACT CUSTOMER SERVICE AT [SUPPORT@NEXCAM.COM](mailto:support@nexcams.com) FOR WARRANTY CLAIMS.

This warranty is void if any product has been subjected to misuse, abuse, neglect (including but not limited to improper maintenance or failure to follow instructions), storage, improper use, misapplication, accident, normal wear, modification, adjustment, or repair.

NO OTHER WARRANTIES WHETHER EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THE PRODUCT.

LIMITATION OF LIABILITY

It is expressly understood that our liability for this product, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to repair of the product as stated above. We will not be liable for any other injury, loss, damage, or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to material from use of this product howsoever caused.

SERVICING YOUR PRODUCT:

If you need repairs or have warranty issues, contact Customer Service at [support@Nexcams.com](mailto:support@nexcams.com) for assistance.

PLEASE NOTE:

We reserve the right to make substitutions on warranty coverage for any reason, including but not limited to available parts.

*Limited Warranty to the Original Owner.

NEXCAM INC. dba RAM BLINDS
405 Annandale Blvd.,
Annandale, MN 55302
Email: support@Nexcams.com
Website: <https://ramblinds.com>

